




Using ISO Speed on CAN-ART From Case IH Pro 700


ISO Speed is the speed that the VT sends on the CAN BUS. The CAN-ART ECU listens to the BUS to get the ISO speed to use. On the PRO700 there are some steps that need to be taken to get this to work properly.

On the CAN-ART Software you need to be able to select the ISO Speed Option. Press the Speed Type select soft key until either  or  become options to choose for a speed type. If neither of these icons show up then the following steps need to be taken to make them selectable.

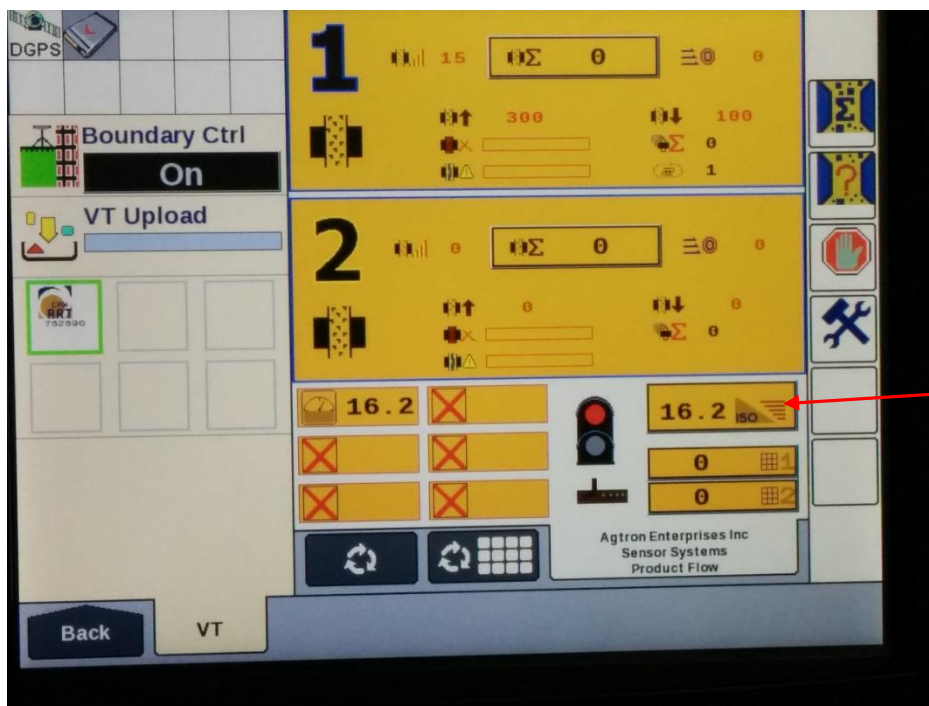


Speed Type showing ISO Ground Speed selected.


1.) From the Main Screen of the Pro 700 press the Toolbox soft key.

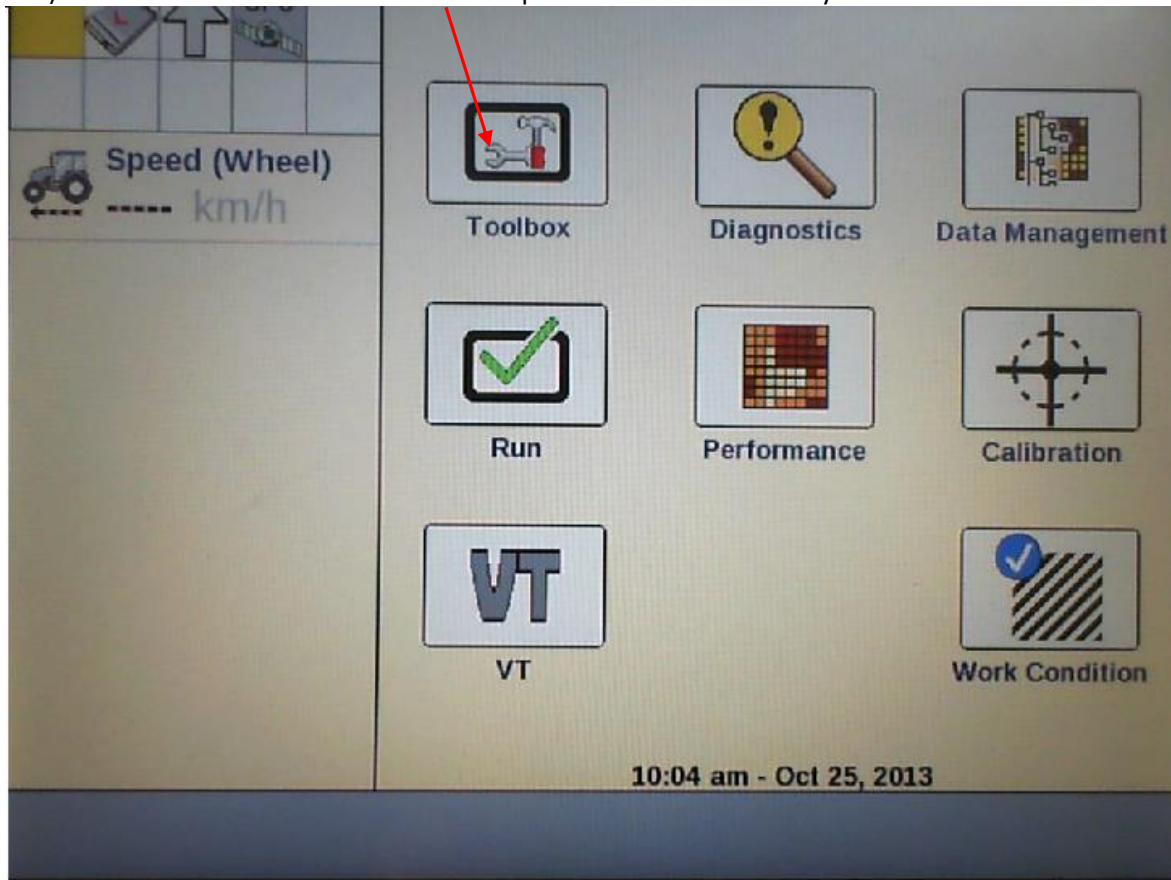


2.) On the next screen select the VT tab.

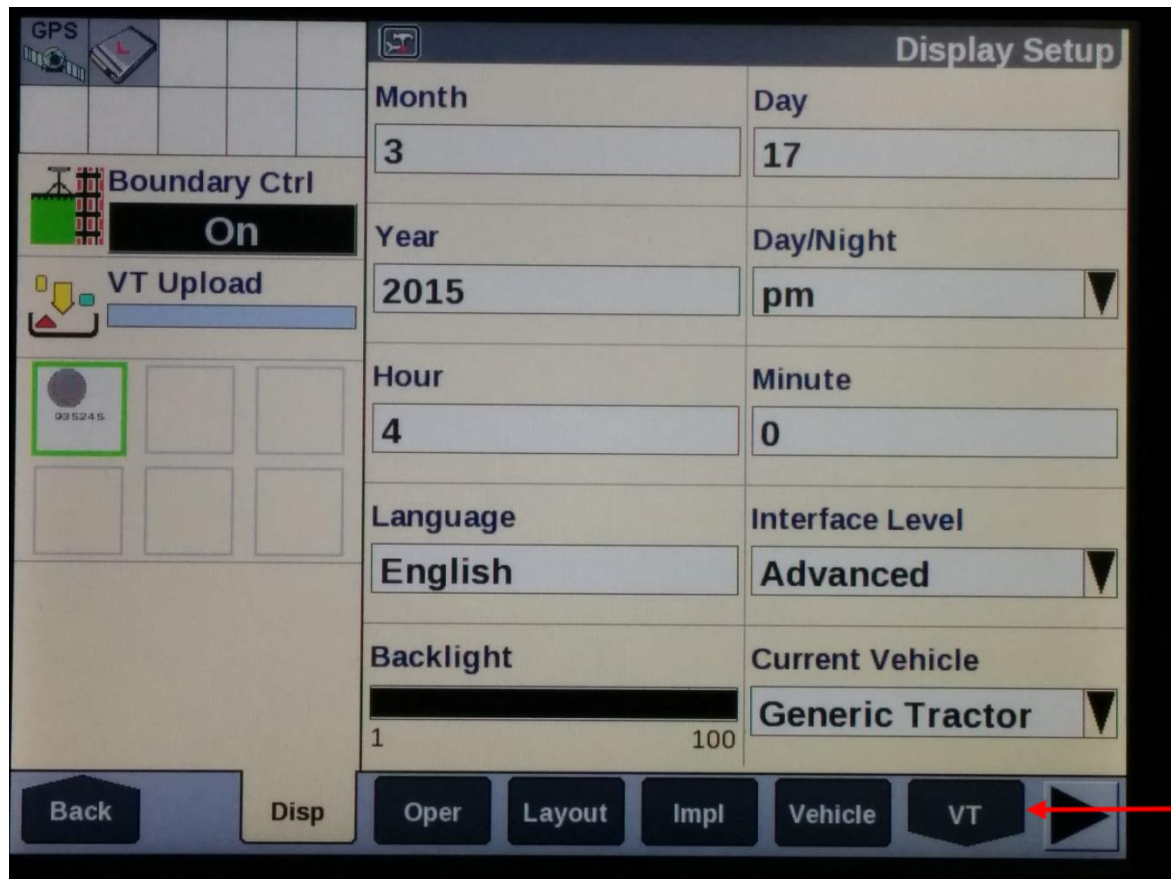

3.) Select the drop down menu below Send ISO Speed?

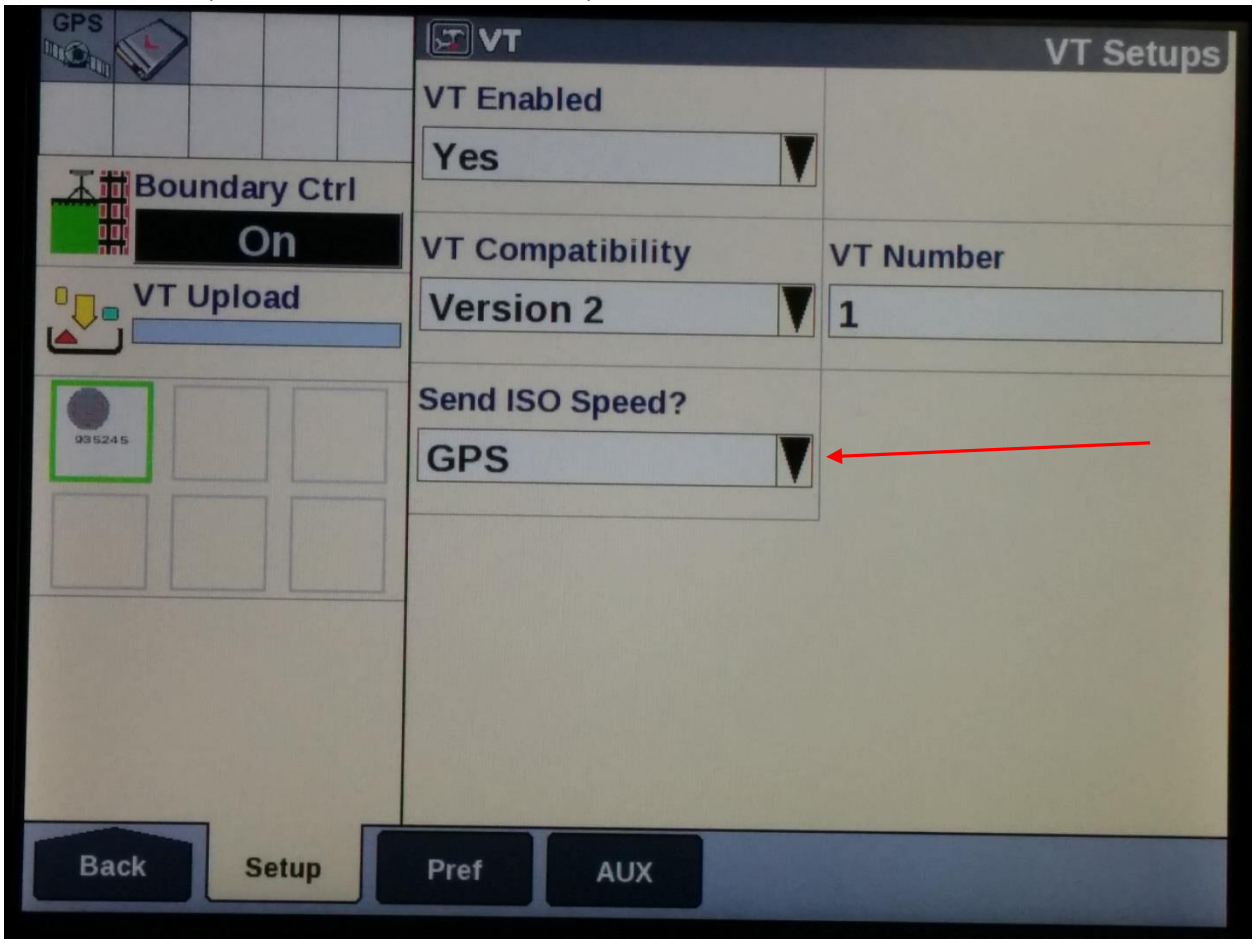

4.) Select the appropriate source that the speed is coming from. If you don't choose the proper speed type, the ISO speed will not work on the CAN-ART.

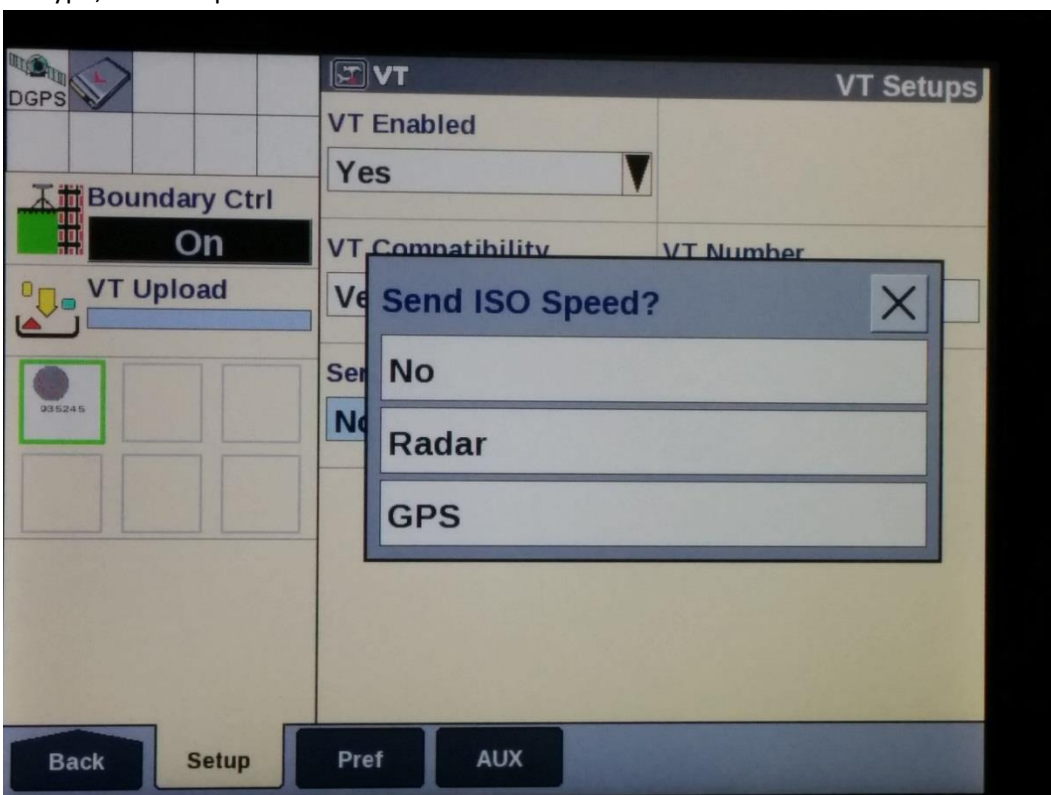

Any questions or concerns you can email me @ kris.kennedy@agtron.com